
MOUNTING OF DBM610 FRAME 1320 x 720 mm

- > Remove the rods from the cover.
- Green labels are sticked on each tip of rod, numbered from 1 to 8.
- > Fit all rods with same numbers together :

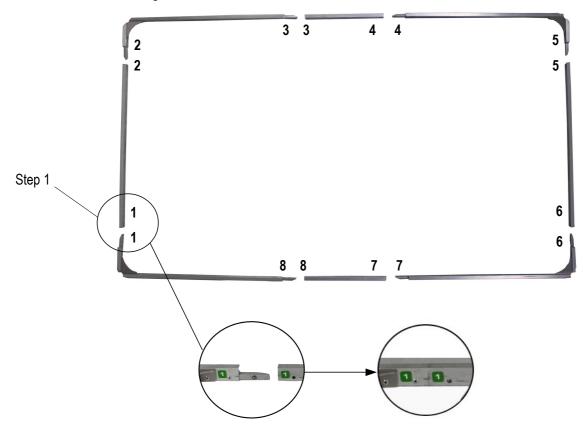

MOUNTING OF DBM610 FRAME 1320 x 720 mm

- > Remove the rods from the cover.
- Green labels are sticked on each tip of rod, numbered from 1 to 8.
- > Fit all rods with same numbers together :

