



## KISTOCK KT 20

### Temperature datalogger

- Fast data download (up to 1,400 values/second)
- Up to 8,192 measurement points
- 2 configurable setpoint alarms
- Small dimensions
- IP 56 housing

### Technical features

Resolution.....	0.5°C
Storage capacity.....	2,048 or 8,192 points
Setpoint alarm.....	2 setpoint alarms
Frequency of measurement.....	from 1s to 255min (KT-20-G) from 1s to 273h (KT-20-L and KT-20-T)
Working temperature.....	from -40 to +85°C (KT-20-G and KT-20-L) from 0 to +125°C (KT-20-T)
Storage temperature.....	from -40 to +85°C
Battery life.....	5 years*

When used at a temperature higher than 50°C, the battery life of datalogger is reduced.

(\* on the basis of 1 measurement each minute at 20°C (KT-20-G)  
on the basis of 1 measurement each 10 minutes at 20°C (KT-20-L/T)

#### Temperature transmitter


Measuring range.....	-40 to +85°C (KT-20-G and KT-20-L) 0 to +125°C (KT-20-T)
Accuracy.....	KT-20-G : ±1°C (-30°C ≤ T ≤ +70°C) ±1.3°C (T < -30°C and T > +70°C) KT-20-L : ±0.5°C for +10°C < T < +65°C KT-20-T : ±0.5°C for +20°C < T < +75°C

All accuracies indicated in this document were stated in laboratory conditions and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation.

### Features of housing


Dimensions.....	Ø 17.35 x 5.89 mm
Weight.....	3.3g
Material.....	STAINLESS STEEL
Protection.....	IP 56
PC communication.....	specific USB interface
Environment.....	Air and neutral gases

### Dimensions

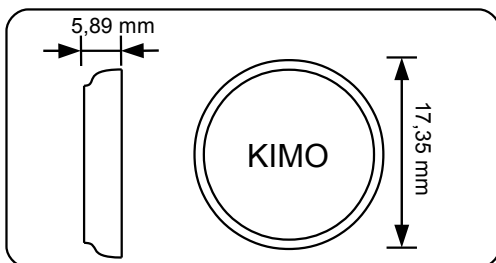

### PC connection

#### Data download on the PC

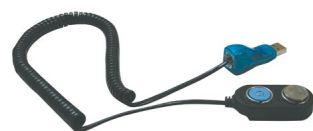

Place the KT-20 as shown beside, and connect the USB to your PC.



Be careful to insert the KT-20 with the engraved side not visible.

[www.kimo.fr](http://www.kimo.fr)



EXPORT DEPARTMENT  
Tel : + 33. 1. 60. 06. 69. 25 - Fax : + 33. 1. 60. 06. 69. 29  
e-mail : [export@kimo.fr](mailto:export@kimo.fr)

### References

Part number	Storage capacity	Measuring range
KT-20-G	2048	From -40 to +85°C
KT-20-L	8192	From -40 to +85°C
KT-20-T	8192	From 0 to +125°C

### Recorder functions

KT-20 can record measurements in real time. To do so, you just have to select the launch type:

- « immediate »
- « delayed » (with predefined date and time)
- « according alarm » : record is made when a measurement exceeds the setpoint alarm (function available on KT-20-L and KT-20-T models)

The dataset will stop once the storage capacity is full.

You can also choose the non-stop record (« loop » recording option).

### KILOG Softwares



- Configuration and data processing software
- KILOG enables you to configure, save and process your data in a very simple way.

- Software..... Ref. KILOG-N
- Interface..... Ref. I-KIC1
- Complete set: KILOG software + 2 USB interfaces... Ref. KIC12



#### KILOG CFR software

KILOG CFR software is the key tool for users who require traceability, in accordance with 21 CFR-Part11 standards. Security and integrity of data are guaranteed: it is not possible to modify or tamper with the data.

- Complete set: KILOG CFR software + 2 USB interfaces  
Ref. KIC12 CFR-N

### Calibration

KISTOCK dataloggers can be supplied with calibration certificate as an option.

Distributed by :