


Technical Specification



Product: FaceGuard
Pouch Mask
Code: MNHW04110

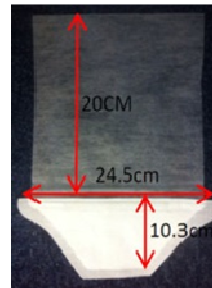

Product	Face Mask
Brand	FaceGuard
Material	Thermal calendered & meltblown PP
Size	245mm x 103mm
Colour	White

PRODUCT INFORMATION

Former Code(s)

FG-4-50

Product Description

White cleanroom pouch mask with head band and nose piece
Mask size 245mm (width) x 103mm (height)
Neck guard 200mm long

Intended Use

Cleanroom pouch face mask

Pack Format

Individually packaged
50 masks double-bagged
20 double-bagged packs per carton

Carton Label Information and Traceability

- Product description
- Product code
- Pack quantity

Carton Specification

Dimensions (mm) = 530 x 360 x 520
Weight (kg) = 6



TECHNICAL INFORMATION

Materials and Performance	Mask size = 210mm x 90mm Bacterial filtration efficiency (ASTM-F-2101) = 99% (3.0µm) Particle filtration efficiency (ASTM-F-2299) = 98% Differential pressure = <3mm H ₂ O/cm ² Outer facial layer = thermal calendered polypropylene (30g/m ²) Filter layer = meltblown polypropylene (55g/m ²) Inner facial layer = thermal calendered polypropylene (20g/m ²) Neck guard = thermal calendered polypropylene (18/m ²) Head loop = Opelon, ultrasonically bonded Nose piece = aluminium Spacer = non latex band
Particle Release (≥5µm)	IEST-RP-CC003.2 Helmke Drum Test (>5.0µm)= 70 counts/mask/ft ³ /min
Packaging	Primary and secondary packaged in polythene bags in ISO 14644 Class 5 (in use)
Sterilisation Method	Non-sterile
Quality Assurance	Product supplied under BS EN ISO 9001:2008 registered systems
Storage Conditions	Store in a dry, well-ventilated area in ambient conditions
Hazard Statement	Non-hazardous
Shelf Life	5 years from date of manufacture

Contact Details

Micronclean Skegness

Roman Bank
Skegness
Lincolnshire
PE25 1SQ
UK

Tel: +44 (0) 1754 767377
orders@micronclean.co.uk

Micronclean Newbury

Faraday Road
Newbury
West Berkshire
RG14 2AD
UK

Tel: +44 (0) 1635 234050
consumables@micronclean.biz

Micronclean Products Ltd.

Rookery House
The Guineas
Newmarket, Suffolk
CB8 8EQ
UK

Tel: +44 (0) 1842 822150
sales@micronclean.com